

SERVICE BULLETIN

3110

Dometic GmbH, In der Steinwiese 16, D-57074 Siegen

RM 7XXX

Shelf does not stay

In some refrigerators the upper shelf does not stay in its seat properly.
In this cases please use the washer (spare part number 734 1146-60/8) and do the following:



Gap between shelf and inner door.



Disassemble the cover from the shelf.



Put as many washers as you need on the hinge pin of the cover.



Shelf is seated against the inner door.